

Circular Saw Safety

Hand-held circular saws can spin their blades at 5,000 revolutions per minute, making these saws extremely dangerous. Hazards include noise, flying objects, electrical and saw kickback. Review the following circular saw safety tips with your employees.



Toolbox Tips

- Always wear eye protection when using circular saws.
- Inspect tools for any damage prior to each use.
- Hearing protection is recommended as saws are very loud and can lead to hearing loss.
- Set the saw cutting depth as shallow as possible. Avoid letting the blade protrude much below the stock being cut.
- Never set a circular saw down unless the blade has stopped.
- Change blades only when unplugged.
- Do not hold or force the retracting lower guard in the open position.
- Do not place hand under the shoe or guard of the saw.
- Do not over tighten the blade-locking nut.
- Do not twist the saw to change, cut or check alignment.
- Do not use a saw that vibrates or appears unsafe in any way.
- Never saw free-handed.
- Do not cut materials without first checking for obstructions or other objects such as nails and screws.
- Tie up loose clothing and hair, and remove jewelry that could be pulled into the saw.
- Operate circular saw with a good footing and make sure the area is clear of trip hazards.

These advisory materials have been developed from national standards and sources believed to be reliable, however, no guarantee is made as to the sufficiency of the information contained in the material and MEM assumes no liability for its use. Advice about specific situations should be obtained from a safety professional.